



Original	Replacement
 POWER	 Power
 INFO	 Info / Angle
 MUTE	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 SOURCE	 AV / Input / RDS
 0	 0
 AUDIO	 Audio / Lang I/II
 FORMAT	 Picture / Format
 BACK	 Back / Return

Original	Replacement
 MENU	 Menu / Home
 EXIT	 Exit / Cancel / Clear
 UP	 Up
 LEFT	 Left
 ENTER	 OK
 RIGHT	 Right
 VOL+	 Vol+
 DOWN	 Down
 CH+	 CH+ / Page+
 VOL-	 Vol-
 CH-	 CH- / Page-
 LIST	 Smart / List
 SLEEP	 Sleep / Timer
 EPG	 Guide / EPG / -/-
 FAV	 Fav / Marker / PC
 <<	 << / Tune-
 RED	 Red / Netflix / Search





	Original	Replacement	Original	Replacement
		 >> / Tune+		
		 GREEN / APP / Repeat		
		 I<< / Preset-		
		 YELLOW / YouTube / Repeat		
		 BLUE / Prime Video / Random		
		 >>I / Preset+		
		 PLAY / Slow		
		 PAUSE / Step / Freeze		
		 TEXT / Goto		
		 STOP / Hold		
		 SUBTITLE / EQ		
		 RADIO / TV/Radio /		
		 OPT / Setup / OPT /		
		 DMP / Display / Media		
		 INDEX / D.Menu / Top		
		 REC / Rec Mode		

