









 















 
 


 


 







 



 






 


 






 
 


 
 




Original	Replacement	Original	Replacement
 Tv Power	 Power	 Mute	 Mute
 STV Power	 Shift + Power	 CH List	 List
 Source	 AV	 PR+	 Ch +
 1	 1	 PR-	 Ch -
 2	 2	 Menu	 Menu
 3	 3	 Smart Hub	 Smart
 4	 4	 Guide	 Guide
 5	 5	 Tools	 Options
 6	 6	 Info	 Info
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 TTX/MIX	 Text	 Enter	 Ok
 PRE-CH	 Pre Ch	 Return	 Back
 Vol+	 Vol +	 Exit	 Exit
 Vol-	 Vol -	 Red/A	 Red





Original	Replacement	Original	Replacement
 Green/B	 Green		
 Yellow/C	 Yellow		
 Blue/D	 Blue		
 Search	 TV/R		
 Ball	 Media		
 Keypad	 D. Menu		
 E-Manual	 Shift + D. Menu		
 P.Size	 Format		
 AD/Subt	 Subt		
 <<<	 <<<		
 Pause	 Pause		
 >>>	 >>>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

