


 


 

 

 


 







 
 
 


 











Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol+
 TV/RAD	 TV/Radio /	 Mute	 Mute / Dimmer
 Input	 AV / Input / RDS	 PR+/Page Up	 CH+ / Page+
 AV Mode	 Picture / Format	 Vol-	 Vol-
 Energy Saving	 Eject / Surround	 PR-/Page Down	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Return	 Back / Return
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green/Stop	 Green / APP / Repeat
 List	 Smart / List	 Green/Stop	 Stop / Hold
 0	 0	 Yellow/Play	 Yellow / YouTube / Repeat
 Q.View	 Display / Media	 Yellow/Play	 Play / Slow

Original	Replacement	Original	Replacement
 DIMMER MUTE	 SHIFT	 TV	 DVD
 SLOW	 AUX	 STEP-FREEZE	 HOLD
 TUNE-	 REC MODE	 TUNE+	 PRESET-
 TITLE	 PRESET+	 LANG UII	 EQ
 SOUND	 SURROUND	 EQ	 SUBTITLE
 FORMAT	 PROGRAM	 SIZE	 TIMER
 PICTURE	 RDS	 ZOOM	 TV RADIO
 TOP MENU	 AV INPUT	 OPT-TOOLS	 GOTO
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 OK	 INFO
 MENU	 HOME	 Left	 Left
 CLEAR	 RETURN	 Right	 Right
 EXIT	 BACK	 Down	 Down
 CANCEL	 LIST	 Up	 Up
 +	 SMART	 OK	 OK
 VOL	 MEDIA	 Left	 Left
 -	 DISPLAY	 Right	 Right
 TV	 CH PAGE	 Down	 Down
DVD	 HOME	Return	 Return
VIDEO	 MENU	Back	Back
AUX - HDD	 RETURN	Red	Red
USB	 BACK	Green/Stop	Green/Stop
BLUETOOTH	 NETFLIX	Green/Stop	Green/Stop
LIST	 SEARCH	Yellow/Play	Yellow/Play
Q.MENU	 APP	Yellow/Play	Yellow/Play
T.OPT	 REPEAT	Yellow/Play	Yellow/Play
INFO	 HOLD	Yellow/Play	Yellow/Play
SUBTITLE	 YouTube	Yellow/Play	Yellow/Play
MARK	 REPEAT A-B	Yellow/Play	Yellow/Play
FAV	 SLOW	Yellow/Play	Yellow/Play
LG	 SLOW	Yellow/Play	Yellow/Play



