



| Original | Replacement | Original | Replacement |
|---|---|---|---|
|  Power |  Power |  Menu |  Menu / Home |
|  Mute |  Mute / Dimmer |  Up |  Up |
|  Play |  Play / Slow |  i |  Info / Angle |
|  Pause |  Pause / Step / Freeze |  Left |  Left |
|  Stop |  Stop / Hold |  OK |  OK |
|  Rec |  Rec / Rec Mode |  Right |  Right |
|  << |  << / Tune- |  Exit |  Exit / Cancel / Clear |
|  >> |  >> / Tune+ |  Down |  Down |
|  Lang |  Audio / Lang I/II |  Back |  Back / Return |
|  Source (Games) |  Eject / Surround |  Vol+ |  Vol+ |
|  Movie-Music-Phot |  Picture / Format |  World (Violet) |  Smart / List |
|  [≡].. |  Zoom / Size |  PR+ |  CH+ / Page+ |
|  */O |  Sleep / Timer |  Vol- |  Vol- |
|  TV |  TV/Radio / |  */Q |  Display / Media |
|  Q.Menu |  D.Menu / Top |  PR- |  CH- / Page- |
|  [-O-] |  Setup / OPT / |  1 |  1 |
|  [≡]/Text |  Text / Goto |  2 |  2 |





| | Original | Replacement | Original | Replacement |
|---|----------|---|----------|-------------|
|  | 3 |  3 | | |
|  | 4 |  4 | | |
|  | 5 |  5 | | |
|  | 6 |  6 | | |
|  | 7 |  7 | | |
|  | 8 |  8 | | |
|  | 9 |  9 | | |
|  | Guide |  Guide / EPG / -/-- | | |
|  | 0 |  0 | | |
|  | Red |  Red / Netflix / Search | | |
|  | Green |  Green / APP / Repeat | | |
|  | Yellow |  Yellow / YouTube / Repeat | | |
|  | Blue |  Blue / Prime Video / Random | | |
|  | Recall |  Shift + Back / Return | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

