 





 
 





 
 






Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Play/Pause	 Play / Slow
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <</REW	 << / Tune-
 >>/FF	 >> / Tune+
 I<</Prev	 I<< / Preset-
 >>I/Next	 >>I / Preset+
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Tv/Radio/MMB	 TV/Radio /
 Setup	 Setup / OPT /
 TTX	 Text / Goto
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle

Original	Replacement
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Recall	 Back / Return
 Vol+	 Vol+
 Page Up	 CH+ / Page+
 Vol-	 Vol-
 Page Dn	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7





	Original	Replacement		Original	Replacement
	8	8			
	9	9			
	EPG	Guide / EPG / -/--			
	0	0			
	FAV	Fav / Marker / PC			
	Red	Red / Netflix / Search			
	Green	Green / APP / Repeat			
	Yellow	Yellow / YouTube / Repeat			
	Blue	Blue / Prime Video / Random			
	-/--/Goto	+ Shift + Guide / EPG / -/--			

	Original	Replacement

