







 

 
 
 

 
 
 

 
 




 



 

 

 

 

 


 


 

 



 
 
 
 


 



 

 





 





| Original | Replacement | Original | Replacement |
|---------------------------------------------------------------------------------------|-------------|---------------------------------------------------------------------------------------|----------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Info |  | Info / Angle |
|  | Angle |  | Shift + Info / Angle |
|  | Copy |  | Picture / Format |
|  | Zoom |  | Zoom / Size |
|  | Tv Sys |  | Smart / List |
|  | Music |  | Sound / Title |
|  | Setup |  | Setup / OPT / |
|  | Menu |  | Menu / Home |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Time Shift |  | Sleep / Timer |
|  | 0 |  | 0 |
|  | Goto |  | Shift + Text / |
|  | Rec |  | Rec / Rec Mode |
|  | Stop |  | Stop / Hold |
|  | Subtitle |  | Subtitle / EQ |
|  | Audio |  | Audio / Lang I/II |
|  | <</FR |  | << / Tune- |
|  | >>/FF |  | >> / Tune+ |
|  | A-B |  | Shift + Yellow / YouTube / |
|  | Repeat |  | Shift + Green / APP / |
|  | >>I/Next |  | >>I / Preset+ |
|  | Vol+ |  | Vol+ |
|  | Play/Pause |  | Play / Slow |
|  | Vol- |  | Vol- |





| Original | Replacement | Original | Replacement |
|------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|----------|-------------|
|  I<</Prev |  I<< / Preset- | | |
|  Home |  D.Menu / Top | | |
|  Up |  Up | | |
|  X/Return |  Back / Return | | |
|  Left |  Left | | |
|  Enter |  OK | | |
|  Right |  Right | | |
|  Select |  Fav / Marker / PC | | |
|  Down |  Down | | |
|  Wuaki TV |  Display / Media | | |
|  Red |  Red / Netflix / Search | | |
|  Green/EPG |  Green / APP / Repeat | | |
|  Green/EPG |  Guide / EPG / -/-- | | |
|  Yellow/TTX |  Yellow / YouTube / Repeat | | |
|  Yellow/TTX |  Text / Goto | | |
|  Blue |  Blue / Prime Video / Random | | |

