 
 


 

 

 
 
 
 
 
 
 
 
 

 

 

 

 


 

 
 
 
 


 


 
 
 
 

 
 
 
 
 
 
 

 






Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Mute	 Mute	 9	 9
 Vol+	 Vol +	 0	 0
 Vol-	 Vol -	 Shift + Guide	 Shift + Guide
 Prog+	 Ch +	 PRE	 Pre Ch
 Prog-	 Ch -	 Up/P+	 Up
 [≡]/TXT	 Text	 Down/P-	 Down
 [+]/Display	 Info	 Right/Vol+	 Right
 Tv/DVB-T	 Smart	 Left/Vol-	 Left
 []/Line	 Media	 [II]/Tv Menu	 Menu
 1	 1	 -IXI-/Exit	 Exit
 2	 2	 Timer/Sleep	 Shift + Power
 3	 3	 -I/I-/P.STD	 Shift + Format
 4	 4	 -I/I-/S.STD	 Shift + Dual
 5	 5	 [<>]/P.Size	 Format
 6	 6	 Open/Close	 Eject
 7	 7	 Rec	 Rec



