 









 

 







 



 















 

 

 

 



 

 

 

 

 



 

 

 






Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Vol+	 Vol+
 4	 4	 Vol-	 Vol-
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Tv/Rad	 TV/Radio /
 8	 8	 Page Up	 CH+ / Page+
 9	 9	 Page Down	 CH- / Page-
 0	 0	 HDMI/RES	 Shift + 0
 FAV	 Fav / Marker / PC	 HDMI/RES	 AV / Input / RDS
 Info	 Info / Angle	 Ratio	 Picture / Format
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Back	 Back / Return	 SOS	 D.Menu / Top
 EPG	 Guide / EPG / -/--	 SUB	 Subtitle / EQ





Original	Replacement	Original	Replacement
 Green	 Green / APP / Repeat		
 Lang.	 Audio / Lang I/II		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 TXT	 Text / Goto		
 Timer	 Sleep / Timer		
 Media	 Display / Media		
 Rec	 Rec / Rec Mode		
 USB/List	 Smart / List		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 >>	 >> / Tune+		
 <<	 << / Tune-		
 >>	 >>  / Preset+		
  <<	  << / Preset-		
 Nothing	 Setup / OPT /		

