










 

 



 









 









 



 












 




 




 


 








 

 
 

 
 
 

 

 

 
 
 
 
 

 








 





Original	Replacement	Original	Replacement
 Standby/On	 Power	 <<	 <<
 1	 1	 >>	 >>
 2	 2	 Play	 Play
 3	 3	 Stop	 Stop
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 Mute	 Mute
 7	 7	 Prog+	 Ch +
 8	 8	 Prog-	 Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 Tv/DVD	 TV/R	 Menu	 Menu
 Open/Close	 Eject	 Return	 Back
 DTV/Analog	 Smart	 Exit	 Exit
 Input Sel	 AV	 Title List/Disc Menu	 Media
 Copy	 Options	 Play List/Title Menu	 Shift + Menu
 Pause	 Pause	 Red	 Red




















 

 

 


 





 

 



Original	Replacement
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Guide	 Guide
 Info	 Info
 Subtitle	 Subt
 Text	 Text
 Tv/Radio	 Sleep
 FAV List	 Pre Ch
 Marker	 Shift + Options
 Rec	 Rec
 Audio	 Dual
 Rec Mode	 Shift + Rec
 Rec	 Format
 Repeat	 Shift + Text
 OK	 Ok
 Up	 Up

Original	Replacement
 Down	 Down
 Right	 Right
 Left	 Left
 USB	 Shift + Media
 Timer	 Shift + AV
 HDD	 Shift + Smart






 



 

 





 



 

 

 



 



 



 



 
 
 

 















 
 

 







	Original	Replacement	Original	Replacement
	Input Sel			AV
	1			1
	2			2
	3			3
	4			4
	5			5
	6			6
	7			7
	8			8
	9			9
	0			0
	Prog+			Ch +
	Prog-			Ch -
	Standby/On TV			Power
	Mute Tv			Mute
	Tv Vol+			Vol +
	Tv Vol-			Vol -





Original	Replacement	Original	Replacement
 Standby/On	 Power	 I<<	 I<<
 1	 1	 >>I	 >>I
 2	 2	 Play	 Play
 3	 3	 Stop	 Stop
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 Prog+	 Ch +
 7	 7	 Prog-	 Ch -
 8	 8	 Menu	 Menu
 9	 9	 Return	 Back
 0	 0	 Exit	 Exit
 Tv/DVD	 TV/R	 Title List/Disc Menu	 Media
 Open/Close	 Eject	 Play List/Title Menu	 Shift + Menu
 DTV/Analog	 Smart	 Red	 Red
 Input Sel	 AV	 Green	 Green
 Copy	 Options	 Yellow	 Yellow
 Pause	 Pause	 Blue	 Blue





Original	Replacement	Original	Replacement
Guide	Guide	USB	+ Shift + Media
Info	Info	Timer	+ Shift + AV
Subtitle	Subt	HDD	+ Shift + Smart
Text	Text		
Tv/Radio	D. Menu		
FAV List	Pre Ch		
Marker	+ Shift + Options		
Rec	Rec		
Audio	Dual		
Rec Mode	+ Shift + Rec		
Rec	Format		
Repeat	+ Shift + Text		
OK	Ok		
Up	Up		
Down	Down		
Right	Right		
Left	Left		

