




 



 





 
 

 





 


 







| Original  | Replacement   |
|---|---|
|  Stanby  |  Power                 |
|  DTV/VCR |  AV / Input / RDS      |
|  Mute    |  Mute / Dimmer         |
|  Info    |  Info / Angle          |
|  Pause   |  Pause / Step / Freeze |
|  Menu    |  Menu / Home           |
|  EPG     |  Guide / EPG / -/--    |
|  Exit    |  Exit / Cancel / Clear |
|  Up      |  Up                    |
|  CH+    |  CH+ / Page+          |
|  Left  |  Left                |
|  Vol-  |  Vol-                |
|  OK    |  OK                  |
|  Vol+  |  Vol+                |
|  Right |  Right               |
|  CH-   |  CH- / Page-         |
|  Down  |  Down                |

| Original   | Replacement   |
|--|---|
|  Favorite   |  Fav / Marker / PC   |
|  1          |  1                   |
|  2          |  2                   |
|  3          |  3                   |
|  Game       |  Smart / List        |
|  4          |  4                   |
|  5          |  5                   |
|  6          |  6                   |
|  Recall     |  Back / Return       |
|  7         |  7                  |
|  8        |  8                 |
|  9        |  9                 |
|  0        |  0                 |
|  Tv/Radio |  TV/Radio /        |
|  Audio    |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ     |
|  Text     |  Text / Goto       |



