



 



 









 

 







Original	Replacement	Original	Replacement
	Power		Power
	3D		Picture / Format
	TV		TV/Radio /
	Mute		Mute / Dimmer
	Bluetooth		9
	AUX		7
	Vol+		Vol+
	Vol-		Vol-
	I<<		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+

