 

 
 
 

 
 
 
 


 




 
























Original	Replacement
	Power
	3D
	TV
	TV
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Eco
	0
	Source
	Vol+

Original	Replacement
	Mute
	P+
	Vol-
	P-
	Info
	Option
	Smart Tv
	Guide
	Menu
	Up
	Left
	OK
	Right
	Back
	Down
	Exit
	Zoom-



 

 

 

Original	Replacement
	Power
	Shift + 3
	Shift + 1
	TV/Radio /
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Display / Media
	0
	AV / Input / RDS
	Vol+

Original	Replacement
	Mute / Dimmer
	CH+ / Page+
	Vol-
	CH- / Page-
	Info / Angle
	Setup / OPT /
	Smart / List
	Guide / EPG / -/-
	Menu / Home
	Up
	Left
	OK
	Right
	Back / Return
	Down
	Exit / Cancel / Clear
	Shift + Down





Original	Replacement
 Zoom+	 Shift + Up
 @/Home	 D.Menu / Top
 Sleep	 Sleep / Timer
 Pre-CH	 Shift + Back / Return
 FAV	 Fav / Marker / PC
 List	 Shift + Smart / List
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 OO/Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 I<	 I<< / Preset-
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Replacement
 >	 >> / Preset+
 <<	 << / Tune-
 Rec	 Rec / Rec Mode
 >>	 >> / Tune+

