




















 



 



 






 






 






 













Original	Replacement
 Power	 Power
 A1	 Shift + Smart / List
 V-Format	 Picture / Format
 Timer	 Sleep / Timer
 Mute	 Mute / Dimmer
 Tms	 AV / Input / RDS
 B2	 Shift + Display / Media
 F1	 Shift + 1
 Tv/Sat	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 Tv/Radio	 TV/Radio /
 0/Zoom	 0
 0/Zoom	 Zoom / Size
 Recall	 Back / Return
 Find	 Shift + Red / Netflix /
 Vol-	 Vol-
 Page-	 CH- / Page-
 SAT	 Display / Media
 Rec	 Rec / Rec Mode
 Vol+	 Vol+
 Page+	 CH+ / Page+
 FAV	 Fav / Marker / PC
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle
 Left	 Left





	Original	Replacement		Original	Replacement
	OK	OK		Play Mode	Sound / Title
	Right	Right		USB	+ Shift + 8
	Exit	Exit / Cancel / Clear		Red	Red / Netflix / Search
	Down	Down		Audio	Audio / Lang I/II
	EPG	Guide / EPG / -/--		Green	Green / APP / Repeat
	Folder	Eject / Surround		Option	Setup / OPT /
	Stop	Stop / Hold		TXT	Text / Goto
	Pause	Pause / Step / Freeze		Yellow	Yellow / YouTube / Repeat
	Play	Play / Slow		Blue	Blue / Prime Video / Random
	I<<	I<< / Preset-			
	>>I	>>I / Preset+			
	<</Page-	<< / Tune-			
	<</Page-	+ Shift + CH- /			
	>>/Page+	>> / Tune+			
	>>/Page+	+ Shift + CH+ /			
	<I	+ Shift + I<< / Preset-			
	I>	+ Shift + >>I / Preset+			

