



| Original | | Replacement | | Original | | Replacement | |
|---|--------|---|-------------------|---|----------------|---|-----------------------|
|  | Power |  | Power |  | V- |  | Vol- |
|  | Source |  | AV / Input / RDS |  | World/Internet |  | Smart / List |
|  | 1 |  | 1 |  | P- |  | CH- / Page- |
|  | 2 |  | 2 |  | Menu |  | Menu / Home |
|  | 3 |  | 3 |  | Q.Menu |  | D.Menu / Top |
|  | 4 |  | 4 |  | Up |  | Up |
|  | 5 |  | 5 |  | Left |  | Left |
|  | 6 |  | 6 |  | OK |  | OK |
|  | 7 |  | 7 |  | Right |  | Right |
|  | 8 |  | 8 |  | Down |  | Down |
|  | 9 |  | 9 |  | Back |  | Back / Return |
|  | TV |  | TV/Radio / |  | Exit |  | Exit / Cancel / Clear |
|  | 0 |  | 0 |  | i |  | Info / Angle |
|  | Recall |  | Fav / Marker / PC |  | Music/Camera |  | Display / Media |
|  | V+ |  | Vol+ |  | TV Guide |  | Guide / EPG / -/- |
|  | Mute |  | Mute / Dimmer |  | * / O |  | Shift + 1 |
|  | P+ |  | CH+ / Page+ |  | * / Q |  | Shift + 2 |





| Original | Replacement |
|----------|-----------------------------|
| [≡]/Text | Text / Goto |
| Red | Red / Netflix / Search |
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |
| Lang | Audio / Lang I/II |
| [≡].. | Sound / Title |
| [-O-] | Setup / OPT / |
| << | << / Tune- |
| Pause | Pause / Step / Freeze |
| >> | >> / Tune+ |
| Rec | Rec / Rec Mode |
| Play | Play / Slow |
| Stop | Stop / Hold |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

