 











 



















































Original	Replacement	Original	Replacement
 Power	 Power	 Prog	 TV/Radio /
 Open/Close	 Eject / Surround	 Setup	 Setup / OPT /
 1	 1	 Up	 Up
 2	 2	 DVD/USB	 AV / Input / RDS
 3	 3	 DVD/USB	 Shift + 2
 Subtitle	 Subtitle / EQ	 DVD/USB	 Shift + 8
 4	 4	 Left	 Left
 5	 5	 Enter	 OK
 6	 6	 Right	 Right
 Language	 Audio / Lang I/II	 Menu	 Menu / Home
 7	 7	 Down	 Down
 8	 8	 Mute	 Mute / Dimmer
 9	 9	 <</Rev	 << / Tune-
 OSD	 Display / Media	 Stop	 Stop / Hold
 0/10	 0	 Play	 Play / Slow
 10+	 Guide / EPG / -/-	 Pause	 Pause / Step / Freeze
 Clear	 Exit / Cancel / Clear	 I<</Prev	 I<< / Preset-



