 

 
 

 


 

 

 
 
 
 



 
 
 
 
 


 
 

 












Original	Replacement	Original	Replacement
	Power		Power
	E-Manual		Shift + D. Menu
	[]/Ratio		Dual
	Input		AV
	Tv/Rad		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Q.View		Format
	3D		3D
	Vol+		Vol +
	Vol-		Vol -
	FAV		Pre Ch
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Home		Smart
	Back		Back
	My		D. Menu
	Guide		Guide
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Original		Replacement		Original	Replacement
	OK		Ok		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Text		Text		
	Subtitle		Subt		
	Stop/Live Tv		Stop		
	T.Opt		Options		
	Play		Play		
	Pause		Pause		
	<<		<<		
	>>		>>		
	Rec		Rec		
	Info		Info		
	Simplink		Media		
	Saving Energy		Shift + 3D		

