






 

 

 





 



 

 

 
 
 

 







 



 

 



 

 



 



 



 



 








Original	Replacement	Original	Replacement
 Power	 Power	 TXT/MIX	 Text
 Sleep	 Sleep	 Play	 Play
 Mute	 Mute	 Pause	 Pause
 Mode	 Media	 Stop	 Stop
 1	 1	 Rec	 Rec
 2	 2	 >>/Index	 >>
 3	 3	 <</Hold	 <<
 4	 4	 I<<	 I<<
 5	 5	 >>I	 >>I
 6	 6	 Cancel	 Exit
 7	 7	 Menu	 Menu
 8	 8	 DTV/Radio	 TV/R
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 -/--	 Shift + Guide	 Up	 Up
 Back	 Back	 Down	 Down
 Nicam/A2	 Dual	 Right	 Right








 
 






 

 
 


 

 
Original	Replacement
	 Left
	 Ok
	 Ch +
	 Ch -
	 Pre Ch
	 Guide
	 Info
	 List
	 Red
	 Green
	 Yellow
	 Blue
	 Format
	 3D
	 Subt
	 AV
	 Shift + Ch +

Original	Replacement
	 Shift + Ch -





Original	Replacement	Replacement
Power		Power
Mute		Mute
[ I ]/Menu		Menu
Exit		Exit
Source		AV
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Subtitle		Subt
Text		Text

Original	Replacement	Replacement
Vol+		Vol +
Vol-		Vol -
CH+		Ch +
CH-		Ch -
Up		Up
Down		Down
Right		Right
Left		Left
OK		Ok
Recall		Back
Info		Info
EPG		Guide
Freeze		Options
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue





Original	Replacement	Original	Replacement
Audio	Dual		
I<</[≡+]	I<<		
>>I/[≡..]	>>I		
[≡i]	Smart		
Play	Play		
Pause	Pause		
Stop	Stop		
REP/Rec	Rec		
<</[≡o]	<<		
>>/[≡?]	>>		
FAV	Pre Ch		

