 

 

 
 
 
 


 
 
 
 
 


 

 
 






Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Tv	 TV/R	 Return	 Back
 1	 1	 Info	 Info
 2	 2	 Exit	 Exit
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 Enter	 Eject
 8	 8	 Red	 Red
 9	 9	 Green	 Green
 0	 0	 Yellow	 Yellow
 Enter	 Ok	 Blue	 Blue
 PRE-CH	 Pre Ch	 Vol +	 Vol +
 CH LIST	 List	 Vol -	 Vol -
 FAV CH	 Shift + Pre Ch	 Mute	 Mute
 Tools	 Options	 Source	 AV





Original	Replacement	Original	Replacement
 PR+	 Ch +		
 PR-	 Ch -		
 TTX/MIX	 Text		
 Media.P	 Media		
 P.Size	 Format		
 Dual	 Dual		
 Guide	 Guide		
 Subt	 Subt		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

