 






 


 
 

 








 














 



 

 









 








 
 
 







Original	Replacement	Original	Replacement
 Power	 Power	 P+	 Ch +
 Source	 AV	 P-	 Ch -
 1	 1	 CH List	 List
 2	 2	 Smart Hub	 Smart
 3	 3	 Menu	 Menu
 4	 4	 Search	 TV/R
 5	 5	 Tools	 Options
 6	 6	 Info	 Info
 7	 7	 Return	 Back
 8	 8	 Exit	 Exit
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 TTX/MIX	 Text	 Right	 Right
 PRE-CH	 Pre Ch	 Left	 Left
 Vol+	 Vol +	 Enter	 Ok
 Vol-	 Vol -	 Red	 Red
 Mute	 Mute	 Green	 Green





Original	Replacement	Original	Replacement
	Yellow		Yellow
	Blue		Blue
	Social TV		Media
	HDMI		Subt
	3D		3D
	E-Manual		D. Menu
	P.Size		Format
	SRS		Dual
	<<		<<
	I<<		I<<
	Pause		Pause
	>>		>>
	>>I		>>I
	Rec		Rec
	Play		Play
	Stop		Stop

