


Original	Replacement	Original	Replacement
 Power Disc	 Power	 Vol+	 Vol +
 Disc	 Red	 Vol-	 Vol -
 Play/Pause Disc	 Ok	 Preset+ Disc	 Ch +
 Sleep	 Sleep	 Preset- Disc	 Ch -
 Prog Disc	 Options	 I> Disc	 Right
 >> Disc	 Up	 <I Disc	 Left
 << Disc	 Down	 Clock/Display Tun-AUX-Tape	 Shift + 3D
 Tun	 Green	 Prog Tun	 Shift + Options
 Power Tun	 Shift + Power	 Preset+ Tun	 Shift + Ch +
 Rep All	 Text	 Preset- Tun	 Shift + Ch -
 Shuf	 AV	 Stop Tun	 Shift + Stop
 Clock/Display Disc	 3D	 >> Tun	 Shift + Up
 Timer	 Shift + AV	 << Tun	 Shift + Down
 On/Off Timer	 Guide	 AUX	 Yellow
 DBB	 TV/R	 Power AUX	 Media
 Stop Disc	 Stop	 Stop AUX	 Pause
 Mute	 Mute	 Tape	 Blue

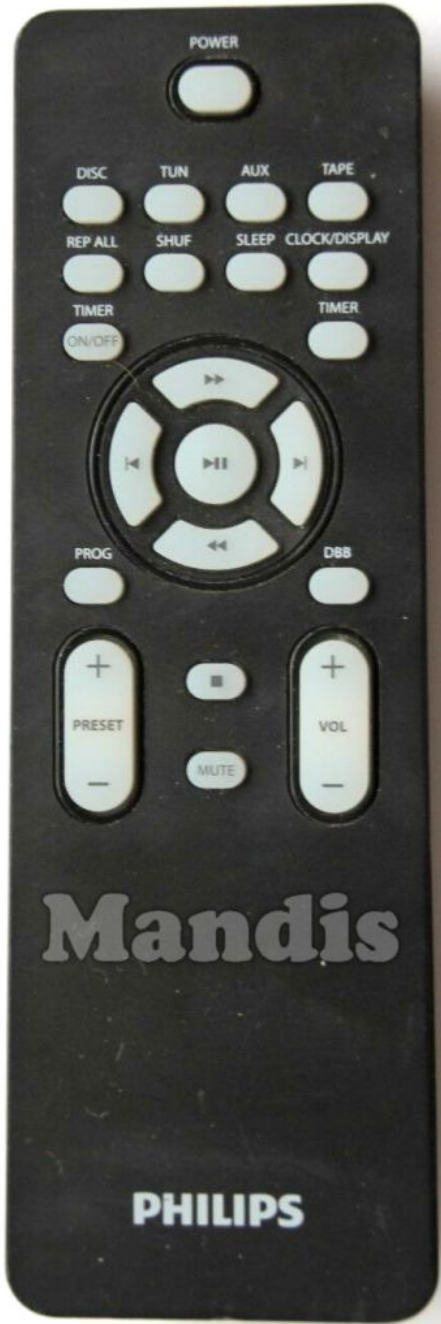



Original		Replacement		Original		Replacement	
	Power Tape	 + 	Shift + Media				
	Play/Pause		Play				
	Stop Tape	 + 	Shift + Pause				

