
 
 

































 

 



















 

 

Original	Replacement
 Power	 Power
 TV / DTV	 Setup / OPT /
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 Info	 Info / Angle
 FAV	 Fav / Marker / PC
 Picture	 Picture / Format

Original	Replacement
 Sound	 Sound / Title
 Vol +	 Vol+
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Mute	 Mute / Dimmer
 CH -	 CH- / Page-
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 I / II	 Audio / Lang I/II
 Still	 Pause / Step / Freeze
 Zoom	 Zoom / Size
 Exit	 Exit / Cancel / Clear





Original	Replacement
 Radio / Browse	 TV/Radio /
 T.Shift / Rotate	 D.Menu / Top
 Lang / Page up	 Shift + Audio / Lang I/II
 Lang / Page up	 Shift + CH+ /
 Subtitle / Page down	 Subtitle / EQ
 Subtitle / Page down	 Shift + CH- /
 DMP	 Smart / List
 PVR	 Display / Media
 Play / Pause	 Play / Slow
 Stop	 Stop / Hold
 Red / <<<	 Red / Netflix / Search
 Red / <<<	 <<< / Tune-
 Green / >>>	 Green / APP / Repeat
 Green / >>>	 >>> / Tune+
 Yellow / I<<<	 Yellow / YouTube / Repeat
 Yellow / I<<<	 I<<< / Preset-
 Blue / >>>I	 Blue / Prime Video / Random

Original	Replacement
 Blue / >>>I	 >>>I / Preset+
 Text	 Text / Goto
 Size	 Shift + Zoom /
 Reveal	 Shift + Smart / List
 Cancel	 Shift + Exit / Cancel / Clear
 Hold / Sleep	 Sleep / Timer
 Hold / Sleep	 Shift + Stop /
 Index	 Shift + Display / Media
 Sub.Code	 Eject / Surround
 Mix	 Shift + Text /

