



Original	Replacement
TEST	Text / Goto
1	1
1	Shift + 1
2	2
2	Shift + 2
3	3
3	Shift + 3
EFFECT	Picture / Format
4	4
4	Shift + 4
5	5
5	Shift + 5
6	6
6	Shift + 6
7/P	Shift + 7
7/P	7
8	8

Original	Replacement
8	Shift + 8
9	9
9	Shift + 9
LEVEL	Down
LEVEL	Shift + Down
LEVEL	Shift + CH- /
LEVEL	Left
LEVEL	Vol-
LEVEL	CH- / Page-
LEVEL+	Up
LEVEL+	Shift + Up
LEVEL+	Shift + CH+ /
LEVEL+	Right
LEVEL+	Vol+
LEVEL+	CH+ / Page+
10/RETURN	Shift + Guide / EPG / -/-
10/RETURN	Guide / EPG / -/-











 



























Original	Replacement
0	0
+10	Fav / Marker / PC
+10 FM/AM	Shift + 0
Play/TA/News/Info	Shift + Play /
Play FM/AM	Play / Slow
I<</PTY-	Shift + I<< / Preset-
I<<FM/AM	I<< / Preset-
Pause/PTY Search	Shift + Pause / Step /
Pause FM/AM	Pause / Step / Freeze
>>I/PTY+	Shift + >>I / Preset+
>>I FM/AM	>>I / Preset+
Stop/Display	Shift + Stop /
Stop FM/AM	Stop / Hold
FM/AM	Shift + TV/Radio / Program
FM Mode	TV/Radio /

Original	Replacement

 














 


 
 
 


 
 




 






 
 



 

















 












	Original	Replacement	Original	Replacement
	 Up	 Up		
	 Left	 Left		
	 Right	 Right		
	 Menu	 Menu / Home		
	 Down	 Down		
	 Enter	 OK		
	 Play/TA/News/Info	 Shift + Play /		
	 Play VCR	 Play / Slow		
	 I<< / PTY-	 Shift + I<< / Preset-		
	 I<< VCR	 I<< / Preset-		
	 Pause/PTY Search	 Shift + Pause / Step /		
	 Pause VCR	 Pause / Step / Freeze		
	 >>I/PTY+	 Shift + >>I / Preset+		
	 >>I VCR	 >>I / Preset+		
	 Rec Pause VCR	 Rec / Rec Mode		
	 Stop/Display	 Stop / Hold		
	 Stop VCR	 Shift + Stop / Hold		





Original	Replacement	Original	Replacement
 Audio Standby	 Audio / Lang I/II	 FM/AM	 Shift + TV/Radio / Program
 1	 1	 VCR	 Shift + 4
 2	 2	 Analog/Digital	 Smart / List
 3	 3	 FM/Mode	 AV / Input / RDS
 TV Standby	 Power	 Surround	 Eject / Surround
 4	 4	 DSP	 Text / Goto
 5	 5	 Surround DSP	 Sound / Title
 6	 6	 Dimmer	 Shift + Mute / Dimmer
 VCR Standby	 Shift + Power	 Tv/Video	 TV/Radio /
 7/P	 7	 Muting	 Mute / Dimmer
 DVD Standby	 Shift + 2	 VCR CH+	 Shift + CH+ /
 Play/TA/News/Info	 Play / Slow	 Tv CH+	 CH+ / Page+
 Sleep	 Sleep / Timer	 Tv Vol+	 Shift + Vol+
 I<</PTY-	 I<< / Preset-	 Vol+	 Vol+
 Pause/PTY Search	 Pause / Step / Freeze	 VCR CH-	 Shift + CH- /
 >>I/PTY+	 >>I / Preset+	 Tv CH-	 CH- / Page-
 Stop/Display	 Stop / Hold	 Tv Vol-	 Shift + Vol-





Mode



**Original**

**Replacement**

Original	Replacement
 Vol-	 Vol-




 





 




 







 





**Original**





**Replacement**

Original	Replacement





Original	Replacement	Original	Replacement
 1 TV Sound	 1	 Stop	 Stop / Hold
 2 TV Sound	 2	 TV Sound	 Sound / Title
 3 TV Sound	 3		
 4 TV Sound	 4		
 5 TV Sound	 5		
 6 TV Sound	 6		
 7 TV Sound	 7		
 8 TV Sound	 8		
 9 TV Sound	 9		
 10 TV Sound	 Guide / EPG / -/--		
 0 TV Sound	 0		
 +10 TV Sound	 Fav / Marker / PC		
 Play	 Play / Slow		
 I<<	 I<< / Preset-		
 Pause	 Pause / Step / Freeze		
 >>I	 >>I / Preset+		
 Rec Pause	 Rec / Rec Mode		

Original	Replacement	Original	Replacement
 Stop	 Stop / Hold		
 TV Sound	 Sound / Title		

