




 


 
 
 
 

 
 
 





Original	Replacement	Original	Replacement
	Power		Power
	HDD List		List
	Live Tv		TV/R
	CAM		3D
	USB		AV
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Disc		Menu
	Options		Options
	Back		Back
	Home		Smart
	Up		Up
	Down		Down
	Right/Skip		Right
	Left/Replay		Left
	OK		Ok
	<<		<<
	>>		>>
	I<		I<<
	Play		Play
	Pause		Pause
	>I		>>I
	Rec		Rec
	Stop		Stop
	Tv Vol+		Vol +
	Tv Vol-		Vol -
	Timer/Video		Media
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3





Original		Replacement		Original		Replacement	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Subtitle		Subt				
	Audio		Dual				
	Info		Info				
	Select		Format				
	Edit		Exit				
	Scart		Pre Ch				

