


 



 

 





 





 



 

 

 

 






Original	Replacement
 Power	 Power
 VCR/DVD	 Media
 DVD Timer	 Green
 VCR Timer	 Red
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AUX	 0
 X/Cancel	 Exit
 Showview/Video Plus+	 Guide
 Prog/Check	 Sleep

Original	Replacement
 Display	 Info
 On Screen/Progressiv	 3D
 Top	 Shift + Menu
 Menu	 Menu
 Set Up	 Options
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 I<</Previous	 I<<
 >>I/Next	 >>I
 <</Slow-	 <<
 Play/Select	 Play
 >>/Slow+	 >>
 Stop/Clear	 Stop












Original	Replacement	Original	Replacement
Power	Power	Prog/Check	Sleep
VCR/DVD	Media	Display	Info
DVD Timer	Green	On Screen/Progressiv	3D
VCR Timer	Red	Top	Shift + Menu
1	1	Menu	Menu
2	2	Set Up	Options
3	3	Return	Back
4	4	Up	Up
5	5	Down	Down
6	6	Right	Right
7	7	Left	Left
8	8	Enter	Ok
9	9	I<</Previous	I<<
0/AUX	0	>>/Next	>>I
X/Cancel	Exit	<</Slow-	<<
Memory/Mark	Smart	Play Select	Play
Showview/Video Plus+	Guide	>>/Slow+	>>

Original	Replacement	Original	Replacement
Power	Power	Prog/Check	Sleep
VCR/DVD	Media	Display	Info
DVD Timer	Green	On Screen/Progressiv	3D
VCR Timer	Red	Top	Shift + Menu
1	1	Menu	Menu
2	2	Set Up	Options
3	3	Return	Back
4	4	Up	Up
5	5	Down	Down
6	6	Right	Right
7	7	Left	Left
8	8	Enter	Ok
9	9	I<</Previous	I<<
0/AUX	0	>>/Next	>>I
X/Cancel	Exit	<</Slow-	<<
Memory/Mark	Smart	Play Select	Play
Showview/Video Plus+	Guide	>>/Slow+	>>





Original	Replacement	Original	Replacement
 Stop/Clear	 Stop		
 Pause	 Pause		
 Rec	 Rec		
 Remain/Rec	 Shift + Rec		
 ↔	 Pre Ch		
 →	 Blue		
 Angle/Live Check	 AV		
 Subtitle	 Subt		
 TV/DVD-TV/VCR	 TV/R		
 Mute/Audio	 Mute		
 PR+	 Ch +		
 PR- TV/CBL/DVD	 Ch -		
 Vol+ Tv	 Vol +		
 Vol- Tv	 Vol -		







Original	Replacement
Power	Power
VCR/DVD	Media
DVD Timer	Green
VCR Timer	Red
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0/AUX	0
Prog/Check	Sleep
Display	Info
Top	Shift + Menu

Original	Replacement
Menu	Menu
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
I<</Previous	I<<
>>/Next	>>I
<</Slow-	<<
Play/Select	Play
>>/Slow+	>>
Stop/Clear	Stop
Pause	Pause
Rec	Rec
Remain/Rec	Shift + Rec
↔	Pre Ch
→	Blue





Original	Replacement
ANGLE LIVE CHECK Angle/Live Check	TIMER AV AV
SUBTITLE Subtitle	AD SUBT Subt
+ PR PR+	+ CH Ch +
- PR PR- TV/CBL/DVD	- CH Ch -
+ TV Vol+ Tv	+ VOL Vol +
- TV Vol- Tv	- VOL Vol -

Original	Replacement

