 


 
 
 
 
 
 
 
 


 
 
 
 
 
 
 



 
 
 











 


 

 




 
 








 

 

 





 





 


Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List
 Previous Channel	 Back
 Vol +	 Vol +
 Vol -	 Vol -
 Aspect	 Format

Original	Replacement
 Lang / NICAM	 Dual
 Input	 AV
 CH +	 Ch +
 CH -	 Ch -
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 Menu	 Menu
 Exit	 Exit
 Display	 Info
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep
 FAV	 Pre Ch
 FAV -	 Shift + Ch -





Original	Replacement
 FAV +	 Shift + Ch +
 EPG	 Guide
 Text	 Text
 Hold	 3D
 TV / Radio	 TV/R
 Subtitle	 Subt
 Index / <<	 <<
 Size / >>	 >>
 Recall / I<<	 I<<
 Subpage / >>I	 >>I
 Rec	 Rec
 Play / Pause	 Play
 Play / Pause	 Pause
 Stop	 Stop
 Media	 Media
 Red	 Red
 Green	 Green

Original	Replacement
 Yellow	 Yellow
 Blue	 Blue

