

 







Original	Replacement	Original	Replacement
 Standby	 Power	 Pic.Mode	 Picture / Format
 Mute	 Mute / Dimmer	 S.Mode	 Sound / Title
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Down	 Down
 7	 7	 Menu	 Menu / Home
 8	 8	 Source	 AV / Input / RDS
 9	 9	 Vol+	 Vol+
 CH.List	 Smart / List	 Tv/Radio	 TV/Radio /
 0	 0	 CH+	 CH+ / Page+
 Recall	 Back / Return	 Vol-	 Vol-
 Aspect	 Shift + Picture / Format	 Display	 Display / Media
 Sleep	 Sleep / Timer	 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II	 Red	 Red / Netflix / Search





Original	Replacement
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Rec	 Rec / Rec Mode
 Time Shift	 D.Menu / Top
 Timer	 Shift + Sleep / Timer
 Rec List	 Shift + Rec / Rec Mode
 Index	 Info / Angle
 Reveal	 Setup / OPT /
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 Hold	 Shift + Stop /
 Play	 Play / Slow
 Size	 Zoom / Size
 Pause/Subpage	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<<	 I<< / Preset-

Original	Replacement
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

