



Original	Replacement
	Power
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	AV / Input / RDS
	TV/Radio /
	Zoom / Size
	Smart / List
	Audio / Lang I/II
	Guide / EPG / -/--
	Sleep / Timer
	Text / Goto
	Exit / Cancel / Clear
	Menu / Home
	Display / Media
	Mute / Dimmer

Original	Replacement
	CH+ / Page+
	CH- / Page-
	Up
	Down
	Right
	Left
	OK
	Vol+
	Vol-
	Back / Return
	>> / Preset+
	<< / Preset-
	Fav / Marker / PC
	1
	2
	3
	4





	Original	Replacement		Original	Replacement
	5	TAPE 5			
	6	TUNER 6			
	7	AUX - HDD 7			
	8	USB 8			
	9	BLUETOOTH 9			
	0	HDMI - BAT 0			
	Info	ANGLE INFO			
	Pause	STEP - FREEZE II			





Original	Replacement
Power	Power
SAT	Smart / List
Info	Info / Angle
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0 / Zoom	Zoom / Size
0 / Zoom	0
Audio	Audio / Lang I/I
Mute	Mute / Dimmer
Recall	Back / Return

Original	Replacement
FAV	Fav / Marker / PC
Up / CH+	CH+ / Page+
Down / CH-	Down
Up / CH+	Up
Right / Vol+	Right
Right / Vol+	Vol+
Down / CH-	CH- / Page-
Left / Vol-	Vol-
Left / Vol-	Left
OK	OK
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Blue / Pause	Blue / Prime Video / Random
Blue / Pause	Pause / Step / Freeze
Red / Text	Red / Netflix / Search
Red / Text	Text / Goto
Multivideo	Display / Media







 




















 









 




















 


 

Original	Replacement	Original	Replacement
Yellow / Subtitle	Yellow / YouTube / Repeat		
Yellow / Subtitle	Subtitle / EQ		
TV / AV	AV / Input / RDS		
Green / P/N	Green / APP / Repeat		
TV / Radio	TV/Radio /		
SAT	Shift + 0		
EPG	Guide / EPG / --		

Original	Replacement





Original	Replacement	Original	Replacement
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--

Original	Replacement	Original	Replacement
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--


































Original	Replacement	Original	Replacement
0/10	0		
FAV Pref.	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Dec/Pause	Pause / Step / Freeze		
	Smart / List		
	D.Menu / Top		

Original	Replacement	Original	Replacement





Original	Replacement	Original	Replacement
Power		Power	
Mute		Mute / Dimmer	
Pause		Pause / Step / Freeze	
Audio		Audio / Lang I/II	
Zoom		Zoom / Size	
Timer		Sleep / Timer	
Tv/Radio		TV/Radio /	
Text		Text / Goto	
Tv/SAT		AV / Input / RDS	
Menu		Menu / Home	
Up/CH+		Up	
Info		Info / Angle	
Left		Left	
OK		OK	
Right		Right	
Exit		Exit / Cancel / Clear	
Down/CH-		Down	

Original	Replacement	Original	Replacement
Recall		Back / Return	
Vol+		Vol+	
List		Smart / List	
P+		CH+ / Page+	
Vol-		Vol-	
M/P		Display / Media	
P-		CH- / Page-	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
EPG		Guide / EPG / -/-	





Original	Replacement	Original	Replacement
0/Sleeptimer	0		
FAV	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		

