






 





























































Original	Replacement	Original	Replacement
 Power	 Power	 PTY Select	 Setup / OPT /
 Sleep	 Sleep / Timer	 Search	 Red / Netflix / Search
 Tuner/Band	 Shift + 6	 CD	 Shift + 3
 Auto/Mono	 Audio / Lang I/II	 I<<	 I<< / Preset-
 1	 1	 >>I	 >>I / Preset+
 2	 2	 Program	 TV/Radio /
 3	 3	 Play	 Play / Slow
 Disc	 D.Menu / Top	 Pause	 Pause / Step / Freeze
 4	 4	 Stop	 Stop / Hold
 5	 5	 Cancel	 Exit / Cancel / Clear
 6	 6	 Tape	 Shift + 5
 >10	 Guide / EPG / -/--	 << Tape	 << / Tune-
 7	 7	 >> Tape	 >> / Tune+
 8	 8	 Rec/Pause	 Rec / Rec Mode
 9	 9	 < Tape	 Shift + << /
 0	 0	 Stop Tape	 Shift + Stop /
 Display Mode	 Display / Media	 Tape >	 Shift + >> / Tune+

Tune+











**Original**

**Replacement**

**Original**

**Replacement**

	Muting		Mute / Dimmer		
	Vol-		Vol-		
	Vol+		Vol+		

