
 


 

 

 







 

 


 
 

 



 


 


Original	Replacement	Original	Replacement
Standby	Power	NICAM	Shift + Audio / Lang I/II
Open/Close /	Eject / Surround	CH +	CH+ / Page+
MUTE	Mute / Dimmer	VOL -	Vol-
1	1	DISPLAY	Display / Media
2	2	CH -	CH- / Page-
3	3	Up	Up
4	4	Left	Left
5	5	OK	OK
6	6	Right	Right
7	7	LCD MENU	Shift + Menu /
8	8	Down	Down
9	9	EXIT	Exit / Cancel / Clear
-/--	Shift + Guide / EPG / -/--	INPUT	AV / Input / RDS
0	0	P.MODE	Picture / Format
RECALL	Back / Return	S.MODE	Sound / Title
VOL +	Vol+	SLEEP	Sleep / Timer
ASPECT	Shift + Picture / Format	FAV	Fav / Marker / PC





Original	Replacement
 FAV -	 Shift + CH- /
 FAV +	 Shift + CH+ /
 EPG	 Guide / EPG / -/--
 TEXT	 Text / Goto
 HOLD	 Shift + Stop /
 Subtitle	 Subtitle / EQ
 TV/RADIO	 TV/Radio /
 INDEX / D.DISP	 Menu / Home
 SIZE / ZOOM	 Zoom / Size
 REVEAL/ANGLE	 Info / Angle
 TITLE / Subpage	 Shift + Sound / Title
 D.MENU	 D.Menu / Top
 Audio	 Audio / Lang I/II
 Goto	 Shift + Text /
 Setup	 Setup / OPT /
 MEDIA	 Shift + Display / Media
 PLAY/PAUSE	 Play / Slow

Original	Replacement
 PLAY/PAUSE	 Shift + Play /
 <<	 << / Tune-
 >>	 >> / Tune+
 REC	 Rec / Rec Mode
 STOP	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 RED / Prog	 Red / Netflix / Search
 GREEN / Intro	 Green / APP / Repeat
 YELLOW /	 Yellow / YouTube / Repeat
 YELLOW /	 Shift + Yellow / YouTube /
 BLUE / A-B	 Blue / Prime Video / Random

