
 
 
 


 


 






 
 


 



 

 


 





 

 

 





 


Original	Replacement	Original	Replacement
On/Off	 Power	Display	 Shift + Info
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 Media	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Sleep Timer	 Sleep	Chan.Up	 Ch +
Info	 Info	Menu audio	 Dual
Return TV	 TV/R	Volume-	 Vol -
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Menu Left	 Left	6	 6
OK Enter	 Ok	7	 7



Original	Replacement	Original	Replacement
8	 8		
9	 9		
Guide -/-- 1.	 Guide		
0/10	 0		
2.Fav P/C 2.	 Pre Ch		
Red	 Red		
Green	 Green		
Tone-	 I<<		
Yellow	 Yellow		
Blue	 Blue		
Off/Tim	 +  Shift + Options		
On/Tim	 Options		
Color+ P.Std	 Format		
Contrast+	 +  Shift + Ch +		
Color- S.Std	 +  Shift + Dual		
Contrast-	 +  Shift + Ch -		
Surround	 +  Shift + Red		

Original	Replacement	Original	Replacement
Nicam/Mono	 +  Shift + Green		
Level L	 +  Shift + Yellow		
Audio-	 +  Shift + Vol -		
Audio+	 +  Shift + Vol +		
Level R/Woofer	 +  Shift + Blue		

