

 




 
 

 


 



 
 


 

 
 
 

 


 



 






 

 







 

 
 





 
 
 












 
 

 
 
 




Original		Replacement		Original		Replacement	
	Standby/On		Power		Memo/Mark		Pre Ch
	Tv/Video		TV/R		PR/CH+		Ch +
	Output Select		AV		PR/CH-		Ch -
	DV		Green		F1		Shift + 1
	HDD		Yellow		F2		Shift + 2
	DVD		Blue		Edit		Guide
	1		1		Prog		Sleep
	2		2		Top Menu		Shift + Menu
	3		3		Navigation		List
	4		4		Menu		Menu
	5		5		Return		Back
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		Enter		Ok
	Cancel		Exit		I<<		I<<





Original		Replacement		Original		Replacement	
	>>I		>>I		Progressive Scan		Text
	<</Slow-		<<		Set Up		Options
	Play		Play				
	>>/Slow+		>>				
	Rec		Rec				
	Stop/Clear		Stop				
	Pause		Pause				
	Display		Info				
	On Screen		3D				
	←		Media				
	→		Smart				
	Rec		Format				
	Audio		Dual				
	Subtitle		Subt				
	Angle/EE Check		Red				
	EE		Eject				
	Dubbing		D. Menu				





Original	Replacement	Original	Replacement
 Standby/On	 Power	 PR/CH-	 Ch -
 Tv/Video	 TV/R	 Input Select	 AV
 Mute	 Mute	 F1	 Smart
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Cancel	 Back		
 Vol+	 Vol +		
 Vol-	 Vol -		
 PR/CH+	 Ch +		

