




 



 



 

 

 

 



 



 

 






 
 



 

 

 

 



 

 







 

 



 




Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Select		Menu		Recall		Pre Ch
	:≡		Smart		←		Guide
	Tv		TV/R		Info/Guide		Info
	Red/B		Red		Message		Subt
	Green/A		Green		?/Options		Options
	Blue/X		Blue		[]/↔		Dual
	Yellow/Y		Yellow		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		PR+		Ch +
	3		3		PR-		Ch -
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right		Right
	7		7		Mute		Mute
	8		8		Left		Left
	9		9		OK		Ok





Original	Replacement	Original	Replacement
Free	Media		
Rec	Rec		
<<<	<<<		
Play/Pause	Play		
Stop	Stop		
>>>	>>>		
<<<	<<<		
>>>	>>>		
Start	AV		
Up(Games)	Shift + Up		
Down(Games)	Shift + Down		
Right(Games)	Shift + Right		
Left(Games)	Shift + Left		

