





































| Original | Replacement |
|-------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
|  Standby / On |  Power |
|  Mute |  Mute / Dimmer |
|  Play / Up |  Play / Slow |
|  Still |  Pause / Step / Freeze |
|  Stop / Down |  Stop / Hold |
|  REC |  Rec / Rec Mode |
|  REW / Left |  << / Tune- |
|  FWD / Right |  >> / Tune+ |
|  Index |  >> / Preset+ |
|  Audio |  Audio / Lang I/II |
|  Turbo Timer |  Sleep / Timer |
|  System |  D.Menu / Top |
|  Menu |  Menu / Home |
|  Play / Up |  Up |
|  Index |  Info / Angle |
|  REW / Left |  Left |
|  Menu |  OK |

| Original | Replacement |
|-------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  FWD / Right |  Right |
|  Clear |  Exit / Cancel / Clear |
|  Stop / Down |  Down |
|  TV Vol + |  Vol+ |
|  P+ |  CH+ / Page+ |
|  TV Vol - |  Vol- |
|  P- |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |



