 

 

 
 








Original		Replacement		Original		Replacement	
	Power		Power		Picture Mode		Format
	Eject		Eject		O)))		Dual
	1		1		[...]		Subt
	2		2		Camera		Smart
	3		3		Sur		Options
	4		4		Picture Navi		3D
	5		5		Repeat		Shift + Text
	6		6		>>		>>
	7		7		<<		<<
	8		8		>> / >		>>
	9		9		< / <<		<<
	0		0		->  >		Ch +
	Clear		Exit		<  /<-		Ch -
	Time/text		Text		Play		Play
	Input		AV		Pause		Pause
	Vol+		Vol +		Stop		Stop
	Vol-		Vol -		Up		Up





	Original	Replacement	Original	Replacement
	Down			
	Right			
	Left			
	Enter			
	Display			
	Return			
	Menu			
	Top Menu			
	Power Tv			

