









 



 





 



 

 



 












 



 

 

 

 
 




 









Original		Replacement		Original		Replacement	
	Power		Power		Stop		Stop
	CH/Level Up		Ch +		<<		<<
	CH/Level Down		Ch -		>>		>>
	Vol+		Vol +		<<		<<
	Vol-		Vol -		>>		>>
	Mute		Mute		1		1
	Marker		Media		2		2
	Up		Up		3		3
	Down		Down		4		4
	Right		Right		5		5
	Left		Left		6		6
	Enter		Ok		7		7
	Setup		Options		8		8
	Menu		Menu		9		9
	Display / Sleep		Info		0		0
	Display / Sleep		Sleep		6CH Dir		3D
	Return/Dimmer		Back		CH Sel		TV/R






Original	Replacement
 Adjust	 List
 Delay	 Exit
 P.Scan	 D. Menu
 T.Tone	 Text
 Auto	 Subt
 DSP	 AV
 Stereo	 Dual
 CD	 Green
 AUDIO	 Red
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD	 Shift + Green
 AUX Power /	 Shift + Power
 AUX P.Scan	 Shift + Smart

Original	Replacement
 AUX Rec	 Shift + Rec
 AUX Pause	 Shift + Pause
 AUX Play	 Shift + Play
 AUX Stop	 Shift + Stop
 AUX <<	 Shift + <<
 AUX >>	 Shift + >>
 AUX >>	 Shift + >>
 AUX <<	 Shift + <<





Original	Replacement
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 CABLE	 Shift + Yellow
 SAT	 Shift + Blue
 TV Power	 Power
 TV CH/Level +	 Ch +
 TV CH/Level -	 Ch -
 TV CH Sel.	 Media
 TV Mute	 Mute
 TV Volume +	 Vol +
 TV Volume -	 Vol -
 TV 1	 1
 TV 2	 2

Original	Replacement
 TV 3	 3
 TV 4	 4
 TV 5	 5
 TV 6	 6
 TV 7	 7
 TV 8	 8
 TV 9	 9
 TV 0	 0
 CABLE Power	 Shift + Power
 CABLE CH/Level +	 Shift + Ch +
 CABLE CH/Level -	 Shift + Ch -
 CABLE CH Sel.	 Shift + Smart
 CABLE Mute	 Shift + Mute
 CABLE Volume +	 Shift + Vol +
 CABLE Volume -	 Shift + Vol -
 CABLE 1	 Shift + 1
 CABLE 2	 Shift + 2





	Original	Replacement	
AUX 3	CABLE 3	SHIFT + 3	Shift + 3
TAPE 4	CABLE 4	SHIFT + 4	Shift + 4
5	CABLE 5	SHIFT + 5	Shift + 5
VIDEO1 6	CABLE 6	SHIFT + 6	Shift + 6
VIDEO2 7	CABLE 7	SHIFT + 7	Shift + 7
VIDEO3 8	CABLE 8	SHIFT + 8	Shift + 8
9	CABLE 9	SHIFT + 9	Shift + 9
0	CABLE 0	SHIFT + 0	Shift + 0

Original	Replacement





Original	Replacement
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD Power	 Power
 DVD P.Scan	 Smart
 DVD T.Tone	 Options
 DVD Audio Sel.	 Dual
 DVD Subtitle	 Subt
 DVD Zoom	 3D
 DVD Marker	 Pre Ch
 DVD Menu	 Menu
 DVD Up	 Up

Original	Replacement
 DVD Left	 Left
 DVD Enter	 Ok
 DVD Right	 Right
 DVD Down	 Down
 DVD Display	 Info
 DVD Pause	 Pause
 DVD Play	 Play
 DVD Stop	 Stop
 DVD <<	 <<
 DVD >>	 >>
 DVD I<<	 I<<
 DVD >>I	 >>I
 DVD 1	 1
 DVD 2	 2
 DVD 3	 3
 DVD 4	 4
 DVD 5	 5





	Original	Replacement	
	DVD 6		6
	DVD 7		7
	DVD 8		8
	DVD 9		9
	DVD 0		0
	SAT Power	+	Shift + Power
	SAT CH/Level +	+	Shift + Ch +
	SAT CH/Level -	+	Shift + Ch -
	SAT CH Sel.	+	Shift + Media
	SAT Mute	+	Shift + Mute
	SAT Volume +	+	Shift + Vol +
	SAT Volume -	+	Shift + Vol -
	SAT 1	+	Shift + 1
	SAT 2	+	Shift + 2
	SAT 3	+	Shift + 3
	SAT 4	+	Shift + 4
	SAT 5	+	Shift + 5

	Original	Replacement	
	SAT 6	+	Shift + 6
	SAT 7	+	Shift + 7
	SAT 8	+	Shift + 8
	SAT 9	+	Shift + 9
	SAT 0	+	Shift + 0





Original	Replacement
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD	 Shift + Green
 CD P.Scan	 Smart
 CD Pause	 Pause
 CD Play	 Play
 CD Stop	 Stop
 CD I<<	 I<<
 CD >>I	 >>I
 CD 1	 1
 CD 2	 2
 CD 3	 3

Original	Replacement
 CD 4	 4
 CD 5	 5
 CD 6	 6
 CD 7	 7
 CD 8	 8
 CD 9	 9
 CD 0	 0
 VCR Power	 Shift + Power
 VCR CH Sel.	 Shift + Media
 VCR Rec	 Shift + Rec
 VCR Play	 Shift + Play
 VCR Mute	 Shift + Mute
 VCR >>	 Shift + >>
 VCR <<	 Shift + <<
 VCR Volume -	 Shift + Vol -
 VCR Volume +	 Shift + Vol +
 VCR CH/Level +	 Shift + Ch +





	Original	Replacement	
CH/LEVEL	VCR CH/Level -	SHIFT + CH -	Shift + Ch -
P.SCAN	VCR P.Scan	SHIFT + HOME SMART	Shift + Smart
	VCR Pause	SHIFT +	Shift + Pause
	VCR Stop	SHIFT + ■	Shift + Stop
TUNER 1	VCR 1	SHIFT + 1	Shift + 1
CD 2	VCR 2	SHIFT + 2	Shift + 2
AUX 3	VCR 3	SHIFT + 3	Shift + 3
TAPE 4	VCR 4	SHIFT + 4	Shift + 4
	VCR 5	SHIFT + 5	Shift + 5
VIDEO1 6	VCR 6	SHIFT + 6	Shift + 6
VIDEO2 7	VCR 7	SHIFT + 7	Shift + 7
VIDEO3 8	VCR 8	SHIFT + 8	Shift + 8
	VCR 9	SHIFT + 9	Shift + 9
	VCR 0	SHIFT + 0	Shift + 0

Original	Replacement

