
 







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 EPG	 Guide / EPG / -/--
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II

Original	Replacement
 Display	 Display / Media
 TV / Radio	 TV/Radio /
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 FAV	 Fav / Marker / PC
 Vol+	 Vol+
 Auto	 Eject / Surround
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Aspect	 Zoom / Size
 CH-	 CH- / Page-
 Source	 AV / Input / RDS





Original	Replacement
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Play/Pause / Text	Play / Slow
Play/Pause / Text	Pause / Step / Freeze
Play/Pause / Text	Text / Goto
Stop / Index	Stop / Hold
Mix	Smart / List
Reveal	Setup / OPT /
<< / Hold	<< / Tune-
>> / Subpage	>> / Tune+
I<< / Size	I<< / Preset-
>>I / Cancel	>>I / Preset+
TimeShift	D.Menu / Top
Rec	Rec / Rec Mode
FAV-	Shift + CH- /
FAV+	Shift + CH+ /

Original	Replacement
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

