



Original	Replacement	Original	Replacement
	On		Power
	Off		Shift + Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Test		Smart
	Night		Exit
	[=]		Text
	Sleep		Sleep
	Surr.		Dual
	SPKR/Menu		Menu
	Delay/Normal		Info
	CH./[=?]		TV/R
	Digital/[=X]		Media
	Up		Up
	Down		Down
	Right		Right
	Tun-M/[=+]		Shift + Guide
	Mem/[=◇]		Pre Ch
	Tuning ▲		Ch +
	Tuning ▼		Ch -
	Direct/Green		Green
	Clear/Yellow		Yellow



 


 


 
 





 
 



 



 


 
 

 
 
 
 


 
 


 
 
 
 


 
 
 



 


 
 


 


 









Original	Replacement
 Preset ▲	 Shift + Ch +
 Preset ▼	 Shift + Ch -
 OSD	 Back
 RDS/D.Skip	 Options
 Set	 Ok
 Red	 Red
 Blue	 Blue
 DVD	 Shift + 2
 AVR	 Shift + 1
 CD	 Shift + 3
 Tape	 Shift + 4
 VID1/VCR	 Shift + 5
 VID2/TV	 Shift + 6
 VID3/CBL/SAT	 Shift + 7
 VID4	 Shift + 8
 AM/FM	 Shift + 9
 6 CH.	 Guide

Original	Replacement
 > DVD	 Play
 << DVD	 <<
 >> DVD	 >>
 Stop DVD	 Stop
 Pause DVD	 Pause
 I<</Skip Down	 I<<
 Skip Up/>>I	 >>I


 












Original	Replacement	Original	Replacement
 Power On	 Power	 3	 3
 Power Off	 Shift + Power	 4	 4
 Night	 Exit	 5	 5
 [=]	 Text	 6	 6
 Vol+	 Vol +	 7	 7
 Vol-	 Vol -	 8	 8
 SPKR/Menu	 Menu	 9	 9
 CH./[≡?]	 TV/R	 0	 0
 Digital/[≡X]	 Media	 Tun-M/[≡+]	 Guide
 Delay/Normal	 Info	 Mem/[≡◇]	 Pre Ch
 Up	 Up	 Direct	 Smart
 Down	 Down	 Clear	 Shift + Exit
 Right	 Right	 Preset ▲	 Ch +
 Left	 Left	 Preset ▼	 Ch -
 Set	 Ok	 RDS/D.Skip	 Options
 1	 1	 >>	 >>
 2	 2	 <<	 <<

 









 

 
 



 


 



 
 

 

 



 

 
 




 







 




 

 
 





 








	Original	Replacement	Original	Replacement
	Play	 PLAY MODE Play		
	Stop	 Stop		
	Pause	 Pause		
	>>I	 >>I		
	I<<	 I<<		





Original		Replacement		Original		Replacement	
	Power On		Power		Preset ▲/Blue		Ch +
	Power Off		Shift + Power		RDS/D.Skip		Options
	SPKR/Menu		Menu		>>		>>
	Delay/Normal		Info		<<		<<
	1		1		Play		Play
	2		2		Stop		Stop
	3		3		Pause		Pause
	4		4		>>		>>
	5		5		<<		<<
	6		6		Power (On /Off)		Media
	7		7		PR+ VCR		Shift + Ch +
	8		8		PR- VCR		Ch -
	9		9		Vol+ VCR		Vol +
	0		0		Vol- VCR		Vol -
	Tun-M/[≡+]		Guide		Input VCR		AV
	Mem/[≡◆]		Pre Ch		1 VCR		Shift + 1
	Direct		Smart		2 VCR		Shift + 2





Original		Replacement		Original	Replacement
	3 VCR		+		Shift + 3
	4 VCR		+		Shift + 4
	5 VCR		+		Shift + 5
	6 VCR		+		Shift + 6
	7 VCR		+		Shift + 7
	8 VCR		+		Shift + 8
	9 VCR		+		Shift + 9
	0 VCR		+		Shift + 0
	Clear VCR				Exit
	Play VCR				Red
	Stop VCR				Green
	Rec VCR				Rec
	>> VCR				Blue
	<< VCR				Yellow





	Original	Replacement		Original	Replacement
	<>	Play			
	>>	>>			
	<<	<<			
	Stop	Stop			
	Rec	Rec			

