



Original	Replacement	Original	Replacement
 Power	 Power	 <<	 << / Tune-
 TV/Radio	 TV/Radio /	 >>	 >> / Tune+
 Red	 Red / Netflix / Search	 Auto	 Smart / List
 Green	 Green / APP / Repeat	 Stop	 Stop / Hold
 Yellow	 Yellow / YouTube / Repeat	 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random	 >>I	 >>I / Preset+
 FAV	 Fav / Marker / PC	 Menu	 Menu / Home
 Text	 Text / Goto	 Up	 Up
 Hold	 Shift + Stop /	 Audio	 Audio / Lang I/II
 Index	 Info / Angle	 Left	 Left
 Subtitle	 Subtitle / EQ	 OK	 OK
 Size	 Zoom / Size	 Right	 Right
 Aspect	 Shift + Picture / Format	 Sleep	 Sleep / Timer
 Subpage	 Eject / Surround	 Down	 Down
 Media	 Shift + Display / Media	 Exit	 Exit / Cancel / Clear
 Play	 Play / Slow	 Vol+	 Vol+
 Pause	 Pause / Step / Freeze	 Mute	 Mute / Dimmer





Original	Replacement	Original	Replacement
CH+	CH+ / Page+	P.Mode	Picture / Format
Vol-	Vol-	S.Mode	Sound / Title
Display	Display / Media		
CH-	CH- / Page-		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
-/--	Guide / EPG / -/--		
0	0		
Recall	Back / Return		
Source	AV / Input / RDS		

Original	Replacement	Original	Replacement
P.Mode	Picture / Format		
S.Mode	Sound / Title		

