 


Original	Replacement
Power DVD	Power
Rec Check	Rec
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
--/--	GUIDE
CH+ / Tracking/V-Lock +	Ch +
CH- / Tracking/V-Lock -	Ch -
AV / Input Select	AV
Output DVD	Media

Original	Replacement
<< Slow/Search	<<
Slow/Search >>	>>
Stop	Stop
Pause / Step	Pause
Play	Play
Top Menu	D. Menu
Menu	Menu
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
Display	Info
Return	Back
Timer	Shift + AV
Play Mode	Shift + Play
Position	Pre Ch

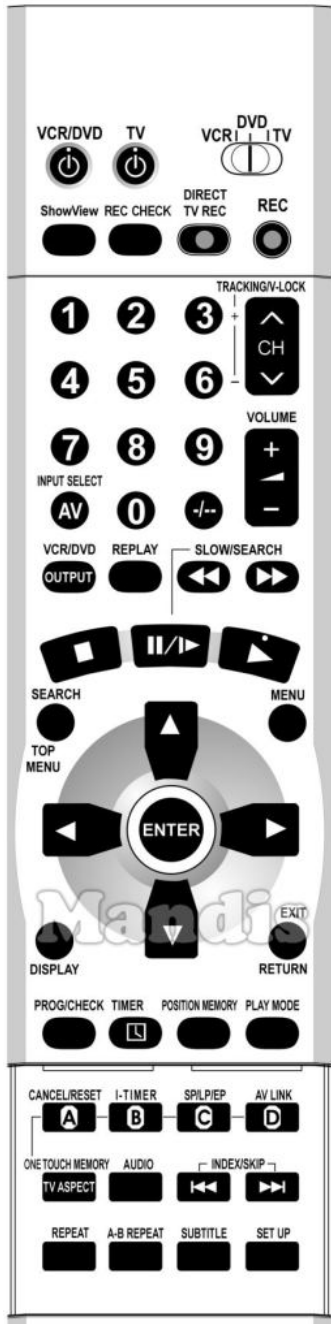 


Memory



Original	Replacement	Original	Replacement
 Replay	 List		
 A / Cancel/Reset	 Red		
 B / I-Timer	 Green		
 C / SP/LP/EP	 Yellow		
 D / AV Link	 Blue		
 One Touch	 Smart		
 Audio	 Dual		
 I<< Index/Skip	 I<<		
 Index/Skip >>I	 >>I		
 Repeat	 Text		
 A-B Repeat	 +  Shift + Text		
 Subtitle	 Subt		
 Setup	 Options		

 


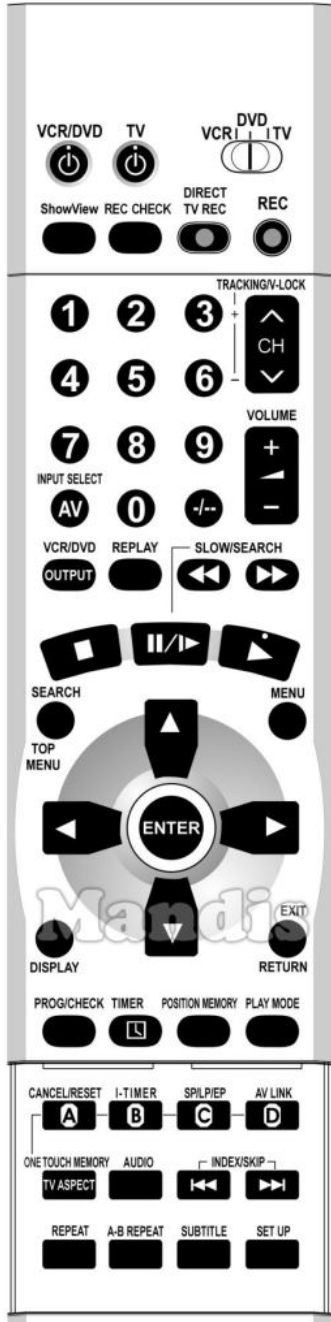

Original	Replacement
Power VCR	Power
ShowView	Smart
Rec Check	Options
Direct TV Rec	Shift + Rec
Rec	Rec
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/-	Guide
CH+ / Tracking/V-Lock +	Ch +

Original	Replacement
CH- / Tracking/V-Lock -	Ch -
AV / Input Select	AV
Output VCR	Media
Replay	List
<< Slow/Search	<<
Slow/Search >>	>>
Stop	Stop
Pause / Step	Pause
Play	Play
Menu	Menu
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
Display	Info
Exit	Exit



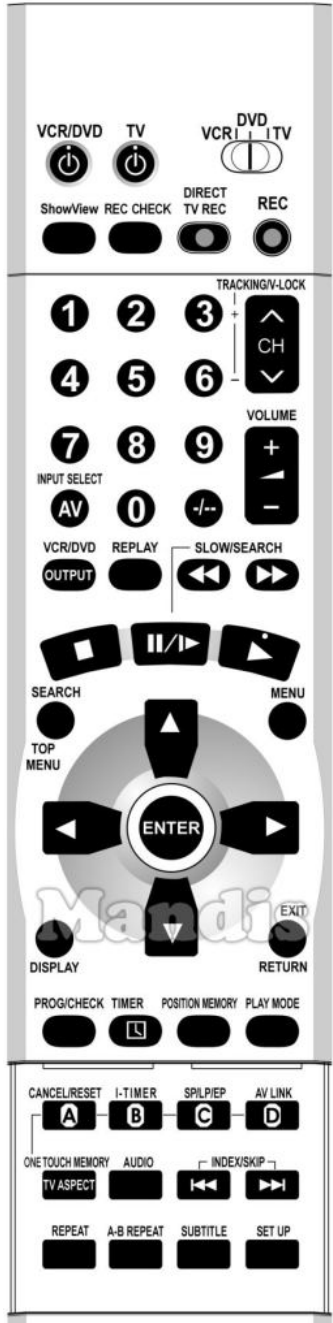

Original	Replacement	Original	Replacement
 Prog / Check	 Sleep		
 Audio	 Dual		
 I<< Index	 I<<		
 Index >>I	 >>I		

