



Original	Replacement	Original	Replacement
POWER	Power		
INPUT	AV / Input / RDS		
^	Up		
<	Left		
Enter	OK		
>	Right		
v	Down		
ZOOM+	CH+ / Page+		
VOL+	Vol+		
MENU	Menu / Home		
ZOOM-	CH- / Page-		
VOL-	Vol-		
EXIT	Exit / Cancel / Clear		

