



Original	Replacement
POWER	Power
MENU	Menu
LAST	Pre Ch
MUTE	Mute
TEXT	Text
MODE	TV/R
1	1
2	2
3	3
6	6
5	5
4	4
7	7
8	8
9	9
FAV	Shift + Pre Ch
0	0

Original	Replacement
GUIDE	Guide
UP	Up
OK	Ok
DOWN	Down
LEFT	Left
RIGHT	Right
VOL+	Vol +
VOL-	Vol -
PR-	Ch -
PR+	Ch +
SWAP	Shift + Green
ZOOM	Eject
RED / MOSAIC	Red
BACK	Back
GREEN / SLEEP	Green
YELLOW /	Yellow
BLUE / LIST	Blue





Original	Replacement		Original	Replacement
	PAGE DOWN			
	PAGE UP			
	TIME SHIFT			
	STOP			
	REC			
	REW			
	PLAY / PAUSE			
	FWD			
	PLAY / PAUSE			
	OPTION			
	PIP			
	TIMER			
	MEDIA			
	PAUSE			
	V. FORMAT			
	INFO			

Original	Replacement

