

 





 

 




 


 
 









 

 



 

 

 

 



 

 





 









 


















 

 










 
 

 







	Original	Replacement		Original	Replacement
	Power VCR	 Power		Tracking/V-Lock-	 Ch -
	Up	 Up		1	 1
	Down	 Down		2	 2
	Right	 Right		3	 3
	Left	 Left		4	 4
	Play	 Play		5	 5
	Stop	 Stop		6	 6
	>>	 >>		7	 7
	<<	 <<		8	 8
	Pause/Slow	 Pause		9	 9
	Rec/OTR	 Rec		0	 0
	Display	 Info		-/--	 Guide
	Zero Stop	 Smart		Input Select	 AV
	Jog/Shuttle On	 Media		Vol+	 Vol +
	I<< Index	 I<<		Vol-	 Vol -
	>>I Index	 >>I		OSD	 Back
	Tracking/V-Lock+	 CH +		Audio Out	 Dual





















 












 
 
 
 

 


 







 





	Original	Replacement	Original	Replacement
	Power	 Power		
	Direct Tv Rec	 Options		
	CH+	 Ch +		
	CH-	 Ch -		
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	-/--	 Guide		
	Vol+	 Vol +		
	Vol-	 Vol -		





	Original	Replacement		Original	Replacement
	Power VCR		Power		Index >>I
	Up		Up		Tracking/V.Lock+
	Down		Down		Tracking/V.Lock-
	Right		Right		OSD
	Left		Left		Audio Out
	Play		Play		Input Select
	Stop		Stop		Tv/AV
	>>		>>		1
	<<		<<		2
	Pause/Slow		Pause		3
	Rec/OTR		Rec		4
	Display		Info		5
	Reset		TV/R		6
	Zero Stop		Smart		7
	Jog/Shuttle On		Media		8
	Jog/Shuttle ▲		Shift + Media		9
	I<< Index		I<<		0





Original	Replacement	Original	Replacement
-/--	Guide	Check	Green
Vol+	Vol +		
Vol-	Vol -		
Tv CH+	Shift + Ch +		
Tv CH-	Shift + Ch -		
Direct Tv Rec	Options		
AV Link	Text		
Menu	Menu		
Exit	Exit		
Store	3D		
Nothing 1	Shift + AV		
Nothing 2	Shift + Format		
SP/LP	Format		
PDC/VPS	Blue		
Transmit	Yellow		
Power Tv	Shift + Power		
Timer Rec	Red		

