


 




 
 
 



 

 


 



 








 

 



Original	Replacement	Original	Replacement
	Power		Power
	FAV		Pre Ch
	Mute		Mute
	EPG		Guide
	Back		Back
	Next >		>>
	Help		D. Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Original	Replacement	Original	Replacement
	Text		Text
	< Prev		<<<
	Radio		TV/R
	TV		Smart
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Red		Red
	Green		Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Blue		Blue				
	<<		<<				
	>>		>>				
	Play / Pause		Play				
	Play / Pause		Pause				
	Stop		Stop				
	Rec		Rec				
	Info		Info				
	Timer		AV				
	Web		Media				
	Plugin		Options				
	Audio		Dual				
	Subtitle		Subt				
	Sleep		Sleep				

