



Original		Replacement		Original		Replacement	
	On		Power		Left		Left
	Off		Shift + Power		1		1
	Vol+		Vol +		2		2
	Vol-		Vol -		3		3
	Mute		Mute		4		4
	Test		Smart		5		5
	Night		Exit		6		6
	[≡]		Text		7		7
	Sleep		Sleep		8		8
	Surr.		Dual		9		9
	SPKR/Menu		Menu		0		0
	Delay/Normal		Info		Tun-M/[≡+]		Guide
	CH./[≡?]		TV/R		Mem/[≡◇]		Pre Ch
	Digital/[≡X]		Media		Tuning ▲		Ch +
	Up		Up		Tuning ▼		Ch -
	Down		Down		Direct/Green		Green
	Right		Right		Clear/Yellow		Yellow



 


 


 
 





 



 



 


 
 

 
 
 
 


 
 


 
 
 
 



 
 



 


 
 


 


 









Original	Replacement
Preset ▲	Shift + Ch +
Preset ▼	Shift + Ch -
RDS/D.Skip	Options
Set	Ok
Red	Red
Blue	Blue
DVD	Shift + 2
AVR	Shift + 1
CD	Shift + 3
Tape	Shift + 4
VID1/VCR	Shift + 5
VID2/TV	Shift + 6
VID3/CBL/SAT	Shift + 7
VID4	Shift + 8
AM/FM	Shift + 9
> DVD	Play
<< DVD	<<

Original	Replacement
>> DVD	>>
Stop DVD	Stop
Pause DVD	Pause
I<</Skip Down	I<<
Skip Up/>>I	>>I





Original	Replacement	Original	Replacement
 Power On	 Power	 3	 3
 Power Off	 Shift + Power	 4	 4
 Night	 Exit	 5	 5
 [=]	 Text	 6	 6
 Vol+	 Vol +	 7	 7
 Vol-	 Vol -	 8	 8
 SPKR/Menu	 Menu	 9	 9
 CH./[≡?]	 TV/R	 0	 0
 Digital/[≡X]	 Media	 Tun-M/[≡+]	 Guide
 Delay/Normal	 Info	 Mem/[≡◇]	 Pre Ch
 Up	 Up	 Direct	 Smart
 Down	 Down	 Clear	 Shift + Exit
 Right	 Right	 Preset ▲	 Ch +
 Left	 Left	 Preset ▼	 Ch -
 Set	 Ok	 RDS/D.Skip	 Options
 1	 1	 >>	 >>
 2	 2	 <<	 <<

 






 


 


 



 


 



 
 

 
 
 



 

 
 


 

 







 




 

 
 














	Original	Replacement		Original	Replacement
	Play	PLAY MODE	Play		
	Stop		Stop		
	Pause		Pause		
	>>		>>		
	<<		<<		





Original		Replacement		Original		Replacement	
	Power On		Power		Preset ▲/Blue		Ch +
	Power Off		Shift + Power		RDS/D.Skip		Options
	SPKR/Menu		Menu		>>		>>
	Delay/Normal		Info		<<		<<
	1		1		Play		Play
	2		2		Stop		Stop
	3		3		Pause		Pause
	4		4		>>		>>
	5		5		<<		<<
	6		6		Power (On /Off)		Media
	7		7		PR+ VCR		Shift + Ch +
	8		8		PR- VCR		Ch -
	9		9		Vol+ VCR		Vol +
	0		0		Vol- VCR		Vol -
	Tun-M/[≡+]		Guide		Input VCR		AV
	Mem/[≡◆]		Pre Ch		1 VCR		Shift + 1
	Direct		Smart		2 VCR		Shift + 2





Original	Replacement	Original	Replacement
<b>3</b> 3 VCR	<b>SHIFT</b> + <b>3</b> Shift + 3		
<b>4</b> 4 VCR	<b>SHIFT</b> + <b>4</b> Shift + 4		
<b>5</b> 5 VCR	<b>SHIFT</b> + <b>5</b> Shift + 5		
<b>6</b> 6 VCR	<b>SHIFT</b> + <b>6</b> Shift + 6		
<b>7</b> 7 VCR	<b>SHIFT</b> + <b>7</b> Shift + 7		
<b>8</b> 8 VCR	<b>SHIFT</b> + <b>8</b> Shift + 8		
<b>9</b> 9 VCR	<b>SHIFT</b> + <b>9</b> Shift + 9		
<b>0</b> 0 VCR	<b>SHIFT</b> + <b>0</b> Shift + 0		
<b>CLEAR</b> Clear VCR	<b>EXIT</b> Exit		
<b>▶▶</b> Play VCR	<b>A</b> Red		
<b>◻</b> Stop VCR	<b>B</b> Green		
<b>●</b> Rec VCR	<b>REC MODE</b> Rec		
<b>▶▶▶</b> >>> VCR	<b>D</b> Blue		
<b>◀◀◀</b> <<< VCR	<b>C</b> Yellow		

Original	Replacement





Original	Replacement	Original	Replacement
	 Play		
	 >>		
			
	 Stop		
	 Rec		

