 

 




Original	Replacement	Original	Replacement
 Power	 Power	 7	 7
 Mute	 Mute	 8	 8
 Audio	 Dual	 9	 9
 TV / STB	 Shift + TV/R	 0	 0
 TV / R	 TV/R	 PGUP	 Vol +
 Sleep	 Sleep	 PGDN	 Vol -
 SUB	 Subt	 SAT	 Shift + AV
 TXT	 Text	 FAV +	 Ch +
 Multi	 Smart	 FAV -	 Ch -
 P / N	 Shift + 1	 EPG	 Guide
 Recall	 Pre Ch	 Fav	 Shift + Pre Ch
 1	 1	 Up / CH+	 Up
 2	 2	 Right / Vol+	 Right
 3	 3	 Down / CH-	 Down
 4	 4	 Left / Vol-	 Left
 5	 5	 OK	 Ok
 6	 6	 Menu	 Menu





Original	Replacement	Original	Replacement
 Exit	 Exit	 Stop	 Stop
 Red	 Red	 Rec	 Rec
 Green	 Green	 <<	 <<
 Yellow	 Yellow	 >>	 >>
 Blue	 Blue	 Play / Pause	 Play
 Pause	 Pause	 > <	 Shift + Pause
 Zoom	 Eject	 I<<	 I<<
 Edit	 Format	 >>	 >>
 Info	 Info		
 USB	 AV		
 MP3	 Media		
 JPEG	 Shift + Media		
 PVR List	 List		
 PIP	 Shift + Ok		
 A - B	 Back		
 T.S.	 Shift + 2		
 Goto	 Options		

