







 



 
 




 












 

 

 

 



 

 

 
 
 

 

 

 

 



 



 
















Original	Replacement	Original	Replacement
 Power	 Power	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 Vol+	 Vol +
 3	 3	 Vol-	 Vol -
 4	 4	 I<< Skip	 I<<
 5	 5	 Skip >>I	 >>I
 6	 6	 << Slow/Search	 <<
 7	 7	 Slow/Search >>	 >>
 8	 8	 Pause	 Pause
 9	 9	 Stop	 Stop
 0	 0	 Play	 Play
 -/--	 Guide	 Menu/Play List	 Menu
 Cancel	 Exit	 Top Menu / Direct Navigator	 D. Menu
 AV	 AV	 Functions	 Options
 Input Select	 Media	 Return	 Back
 Direct Tv Rec	 TV/R	 Up	 Up
 ShowView	 3D	 Down	 Down












 







 



 

 














Original	Replacement
	 Right
	 Left
	 Ok
	 Rec
	 +  Shift + Right
	 +  Shift + Left
	 Format
	 Text
	 Sleep
	 Smart
	 +  Shift + AV
	 Pre Ch
	 List
	 +  Shift + Rec
	 Subt
	 Red
	 Info

Original	Replacement
	 Green
	 Yellow
	 Dual
	 Blue





Original	Replacement
 Power	 Power
 CH+	 Ch +
 CH-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 A	 Red
 B	 Green
 C	 Yellow

Original	Replacement
 D	 Blue

