


 





















 

 

 




 



 
 


 



 
 


 











| Original | | Replacement | | Original | | Replacement | |
|---|------------------|---|--------|---|-----------|---|-------|
|  | On/Standby |  | Power |  | Disc CD 1 |  | 1 |
|  | Vol+ |  | Vol + |  | Disc CD 2 |  | 2 |
|  | Vol- |  | Vol - |  | Disc CD 3 |  | 3 |
|  | X-Bass/Equalizer |  | Smart |  | Disc Skip |  | Media |
|  | Video/AUX |  | Red |  | I<</<< CD |  | I<< |
|  | Tape (1 to 2) |  | Blue |  | >>/>>I CD |  | >>I |
|  | Tuner(Band) |  | Green |  | Stop CD |  | Stop |
|  | CD |  | Yellow |  | Play CD |  | Play |
|  | Rec/Pause Tape 2 |  | Rec |  | Memory CD |  | 3D |
|  | << Tape 2 |  | << |  | Clear |  | Exit |
|  | >> Tape 2 |  | >> |  | Random |  | TV/R |
|  | Play Tape 2 |  | Left |  | Pause CD |  | Pause |
|  | Play Tape 1 |  | Right | | | | |
|  | Stop Tape |  | Ok | | | | |
|  | Tuner Preset Up |  | Ch + | | | | |
|  | Tuner Preset |  | Ch - | | | | |
|  | PTY TI |  | Back | | | | |

