




































Original	Replacement
AVR Power On	 Power
Mute	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
<<	 << / Tune-
>>	 >> / Tune+
I<<	 I<< / Preset-
>>I	 >>I / Preset+
Audio Effects	 Audio / Lang I/II
Surround Modes	 Eject / Surround
Video Modes	 Picture / Format
Sleep	 Sleep / Timer
Menu	 Menu / Home
Up	 Up
Info	 Info / Angle
Left	 Left

Original	Replacement
OK	 OK
Right	 Right
Back/Exit	 Exit / Cancel / Clear
Down	 Down
Last	 Back / Return
Vol+	 Vol+
AVR	 Smart / List
CH/Page Up	 CH+ / Page+
Vol-	 Vol-
CH/Page Down	 CH- / Page-
1	 1
2	 2
3	 3
4	 4
5	 5
6	 6
7	 7















 
 






Original	Replacement	Original	Replacement
8	8 (USB)		
9	9 (BLUETOOTH)		
0	0 (HDMI - BAT)		
Red	NETFLIX		Red / Netflix / Search
Green	APP		Green / APP / Repeat
Yellow	YouTube		Yellow / YouTube / Repeat
Blue	Prime Video		Blue / Prime Video / Random
AVR Power Off	SHIFT + Power		
Tv	SHIFT + TV		Shift + 1
Blu-ray	SHIFT + DVD		Shift + 2
DVR	SHIFT + CD - STB		Shift + 3
iPod	SHIFT + VIDEO		Shift + 4
Network	SHIFT + TAPE		Shift + 5
Radio	SHIFT + TUNER		Shift + 6
AUX	SHIFT + AUX - HDD		Shift + 7
Game	SHIFT + USB		Shift + 8
Media Server	SHIFT + BLUETOOTH		Shift + 9

Original	Replacement	Original	Replacement
Cable/Sat	SHIFT + 0 (HDMI - BAT)		Shift + 0



























Original	Replacement	Original	Replacement
1	 1		
DVR	 Display / Media		
DVR Power On	 Power		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
0	 0		
Menu	 Menu / Home		
Up	 Up		
Down	 Down		
Right	 Right		
Left	 Left		

Original	Replacement	Original	Replacement
Mute	 Mute / Dimmer		
Vol+	 Vol+		
Vol-	 Vol-		
CH/Page Up	 CH+ / Page+		
CH/Page Down	 CH- / Page-		





 


Original	Replacement
Bluray Power	 Power
Mute	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Rec	 Rec / Rec Mode
<<	 << / Tune-
>>	 >> / Tune+
I<<	 I<< / Preset-
>>I	 >>I / Preset+
Disc Menu	 D.Menu / Top
Menu	 Menu / Home
Up	 Up
Left	 Left
OK	 OK
Right	 Right
Back/Exit	 Exit / Cancel / Clear

Original	Replacement
Down	 Down
Last	 Back / Return
Vol+	 Vol+
Vol-	 Vol-
Blu-ray	 Display / Media
1	 1
2	 2
3	 3
4	 4
5	 5
6	 6
7	 7
8	 8
9	 9
0	 0
Red	 Red / Netflix / Search
Green	 Green / APP / Repeat





Original	Replacement	Original	Replacement
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Bluray Power Off	 Shift + Power		





Original	Replacement
AVR Power On	Power
AVR Power Off	Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Menu	Menu / Home
Back/Exit	Exit / Cancel / Clear
Last	Back / Return
Up	Up
Down	Down

Original	Replacement
Right	Right
Left	Left
OK	OK
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
CH/Page Up	CH+ / Page+
CH/Page Down	CH- / Page-
Pause	Pause / Step / Freeze
I<<	I<< / Preset-
>>I	>>I / Preset+
Play	Play / Slow
<<	<< / Tune-





Original	Replacement
>>	>> / Tune+
Stop	Stop / Hold
Rec	Rec / Rec Mode
Info	Info / Angle
Sleep	Sleep / Timer
AVR	Smart / List
Audio Effects	Audio / Lang I/II
Video Modes	Picture / Format
Surround Modes	Eject / Surround
Cable/SAT	Shift + 0
Blu-ray	Shift + 2
iPod	Shift + 4
Radio	Shift + 6
TV	Shift + 1
AUX	Shift + 7
DVR	Shift + 3
Game	Shift + 8

Original	Replacement
Media Server	Shift + 9
Network	Shift + 5

