

 
 




 



 


 
 


 



 
 
 

 






 
 





 



 





 







 



 



 

 













 




 






Original	Replacement	Original	Replacement
	Power		Power
	Timer/Play		3D
	Clock/Timer		AV
	Dimmer		Format
	Auto Off		Exit
	Sleep		Sleep
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Del		List
	Program		Shift + Sleep
	Repeat		Text
	Play Mode		Options
	DAB/FM		Red
	Play/Pause CD		Play
	AUX		Green
	<</<<		<<
	Play/Pause iPod		Pause
	>>/>>		>>
	Stop		Stop
	Re-Master		Dual
	D.Bass		Smart
	Display		Info





Original		Replacement		Original		Replacement	
	Surround		Subt				
	Preset EQ		Media				
	iPod Menu		Menu				
	Bass/Treble		TV/R				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				
	Auto Preset		Pre Ch				
	Tune Mode		Back				
	DAB Menu		D. Menu				
	DAB Secondary		Eject				

