

 
 




 



 


 
 


 



 
 
 

 






 
 





 



 





 







 



 



 

 













 






 





| Original | Replacement | Original | Replacement |
|---------------------------------------------------------------------------------------|-----------------|---------------------------------------------------------------------------------------|---------------|
|  | Power |  | Power |
|  | Timer/Play |  | 3D |
|  | Clock/Timer |  | AV |
|  | Dimmer |  | Format |
|  | Auto Off |  | Exit |
|  | Sleep |  | Sleep |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | +10 |  | Guide |
|  | Del |  | List |
|  | Program |  | Shift + Sleep |
|  | Repeat |  | Text |
|  | Play Mode |  | Options |
|  | DAB/FM |  | Red |
|  | Play/Pause CD |  | Play |
|  | AUX |  | Green |
|  | <</<< |  | << |
|  | Play/Pause iPod |  | Pause |
|  | >>/>> |  | >> |
|  | Stop |  | Stop |
|  | Re-Master |  | Dual |
|  | D.Bass |  | Smart |
|  | Display |  | Info |





| Original | | Replacement | | Original | | Replacement | |
|-------------------------------------------------------------------------------------|---------------|-------------------------------------------------------------------------------------|---------|----------|--|-------------|--|
|  | Surround |  | Subt | | | | |
|  | Preset EQ |  | Media | | | | |
|  | iPod Menu |  | Menu | | | | |
|  | Bass/Treble |  | TV/R | | | | |
|  | Up |  | Up | | | | |
|  | Down |  | Down | | | | |
|  | Right |  | Right | | | | |
|  | Left |  | Left | | | | |
|  | OK |  | Ok | | | | |
|  | Auto Preset |  | Pre Ch | | | | |
|  | Tune Mode |  | Back | | | | |
|  | DAB Menu |  | D. Menu | | | | |
|  | DAB Secondary |  | Eject | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

